

TC-88 BASE ASSEMBLY

REF #	PART #	DESCRIPTION	# REQUIRED
1	TCP060	Pump 110V- 60 PSI	1
	TCP100	Pump 110V- 100 PSI	1
	TCP060-02	Pump 230V- 60 PSI	1
	TCP100-02	Pump 230V- 100PSI	1
2	198335	Vacuum Motor 5.7" 3 Stage 110V	1
	198336	Vacuum Motor 5.7" 3 Stage 230V	1
3	*****	Valve Assembly - See Valve Assembly Breakdown	
4	133052	Motor Brush 115 V	1
	133053	Motor Brush 230 V	1
5	136015N	Brush	1
6	*****	Spray Assembly - See Spray Jet Breakdown	
7	198290	Intake Manifold Assembly	1
8	136012	2 Amp Circuit Breaker	1
9	136021	Terminal Block w/ Jumpers	1
10	136003	Base- polyethylene	1
11	H100001	Nut, Hex 1/4-20 Zinc, Nylock	3
12	H100014	Nut, Hex 10-32 SS, Nylock	18
13	H100019	Nut, Hex 6-32 Zinc, Nylock	2
14	H200007	Screw 6-32 X 3/4" Pan Head Phillips, Zinc	2
15	H200013	Screw 10-32 X 5/16" Flat Phillips SS	2
16	H200014	Screw 10-32 X 5/16" Pan Head Phillips SS	8
17	H200015	Screw 10-32 X 1/2" Pan Head Phillips SS	4
18	H200023	Screw 10-32 X 3/4" Pan Head Phillips SS	7
19	H200081	Bolt 1/4-20 X 5" Hex Zinc	3
20	H300003	Washer, Flat 1/2" ID X 1" OD Zinc	2
21	H300013	Washer, Flat Bronze	2
22	H300023	Washer, Flat 1/4" Zinc	6
23	H300025	Washer #10 SAE, Zinc	6
24	H400002	Clamps, Cable Tie 14" Long	1
25	H400005	Clamps, 7/16-3/4" #6 Metal	2
26	198116	Male Quick Disconnect	1
27	H700002	Strike	1
28	H700009	Rivet Regular Bottom Head	6
29	198623	Axle Cap 1/2" Plated Push Nut	2
30	133151	Brush Pulley 3/8"	1
31	136019	Belt, 130 X L037	1
32	133154	Bearing Ball Double Sealed	2
33	136206A	Brush Housing w/ Plate #34	1
35	136200A	Axle Bracket	2
36	136208A	Bearing Retainer SS	1
37	136208B	Bearing Retainer SS w/ Hole	1
39	136205A	Belt Cover SS	1
40	198291	Screen 4" X 4"	2
41	198016	Wheel	2
42	H300005	Washer, Flat 1/2 ID X 1 1/4" OD SS	1
*****	133171	Rectifier 50 Amp	1